

2004.5-2007 FORD 6.0L POWERSTROKE
PLUG-N-PLAY MODULE

USER MANUAL

Disclaimer


- By installing this product onto your vehicle, you assume all risk and liability associated with its use.
- GDP Tuning, LLC. is not responsible for misuse of its products. By installing this product, you release GDP Tuning, LLC. of any and all liability associated with its use.
- The purchaser and end user releases, indemnities, discharges and holds harmless GDP Tuning, LLC. from any and all claims, damages, causes of action, injuries, or expenses resulting from or relating to the use or installation of this product that is in violation of the terms and conditions on this page, the product disclaimer, and/or the product installation instructions. GDP Tuning, LLC. will not be liable for any direct, indirect, consequential, exemplary, punitive, statutory, or incidental damages or fines caused by the use or installation of this product.

Caution

Never work on a hot vehicle. Serious injury in the form of burns can result if the vehicle has been in use. Allow vehicle to cool prior to installation. Always wear eye protection when working on or under any vehicle.

2004.5-2007 FORD 6.0L POWERSTROKE PLUG-N-PLAY MODULE

GDP231004

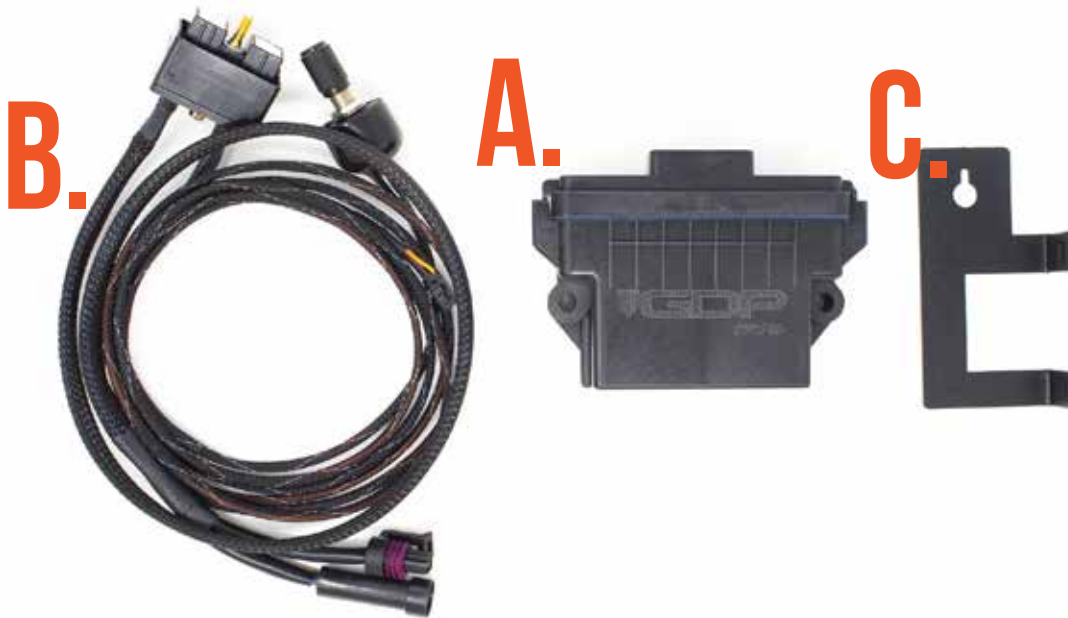

- A. Plug-N-Play Module
- B. Harness
- C. Switch Bracket

Notice:

Make sure to disconnect the negative side battery terminal before beginning your install. Failure to do so may cause CEL's and lack of performance.

Step 1

Find a dry location to mount the GDP module using the supplied zip ties. We recommend the canister located directly behind the passenger's side battery or the bracket the MAP sensor is connected to.

Step 2

Route the switch wire through the firewall to the module using the available hole on the upper part of the firewall. Simply poke a hole in the foil and run the wire through it. If your truck is a manual, we suggest making a small hole in a rubber boot and run the wire through it. Be careful not to cut any factory wiring. Route the wire away from any moving devices and away from extreme heat that may burn the wire.

Step 3

Locate the ICP sensor on the passenger's side valve cover. Disconnect the harness and make sure the small key way connector comes out with the factory plug. If it does not, use a small pair of needle nose pliers to remove it and place it on the factory connector. If it remains in the ICP sensor, you will not be able to plug our connectors to the sensor. Use the supplied connectors and plug into the ICP sensor and the factory plug.

3



Step 4

Now you need to decide where you want to mount your adjustable switch. If you do not want to drill your dash, we have included our GDP switch bracket. You are also ready to reconnect the negative battery terminal.

4